

DISHWASHER AND WASHING MACHINE

DISHWASHER

There should be a few spare tablets under the sink, along with salt and rinse aid. Please add salt and rinse aid as appropriate when warning lights flash.

Most items in the kitchen are dishwasher safe, but please be careful with any tall stemmed glasses.

To put the dishwasher on:

- put a tablet in the dispenser
- press the on/off button on the left
- select a programme using the large dial (please use ECO where possible)
- select time delay if appropriate (saves on cost to put it on overnight)
- select half load if appropriate
- press start (large white dial)

WASHING MACHINE

Please do not overfill the machine. Washing detergent is not generally provided due to guest allergies, but you may find some under the sink left by previous guests if you have not brought your own.