

OVEN, HOB AND MICROWAVE

HOB

Fairly standard halogen hob with a knob for each ring. The rings do glow when very hot but please be careful of the residual heat. Do not warm plates or bowls on the hob as they will crack.

MICROWAVE

The buttons are self explanatory and the microwave is fairly basic but functional. Please use the plastic cover provided to keep the microwave clean.

OVEN

A shortened version of the manual is provided - if you require more in-depth instructions, please look online at <http://www.smeguk.com/user-manuals/> and the model number of the oven is **SFP372X**

The oven will not work if the time lights are flashing and there is an A in the display - this indicates there has been a power outage. Press the right hand button under the time display to put the oven onto manual and it should then work.

Instructions for using the timer are within the provided instructions should you wish to go out and leave your meal cooking! There is also a slow cooker if this best suits your purposes and this is in one of the lower kitchen cupboards.

For basic oven function, please put the right hand dial to the fan symbol with circle at the 5 o'clock position (you may need to bend down to make sure you have selected the right function)

PLEASE DO NOT USE THE CLEANING CYCLE AT "P" OR "ECO P"

Basic oven functions are on p33 of the provided instructions (3rd page in)